




# AIR FACTORS

6226-A INDUSTRIAL WAY  
LIVERMORE, CA 94551

PH. # 925-579-0040  
FAX # 925-579-0044

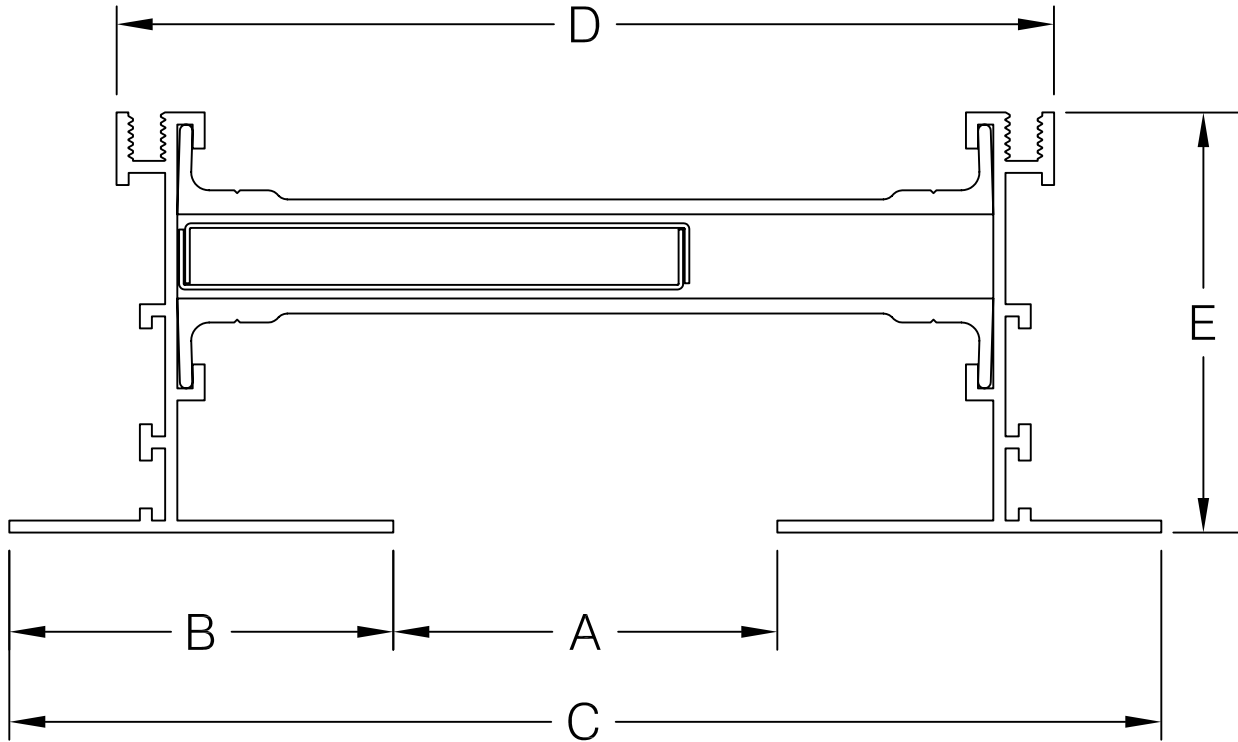

MODEL	A	B	C	D	E
B-10-WFWF	1	1-1/2	4	2-7/8	1-11/16
B-15-WFWF	1-1/2	2	5-1/2	3-7/8	1-15/16
B-20-WFWF	2	2	6	4-7/8	2-3/16
B-25-WFWF	2-1/2	2-1/2	7-1/2	6-1/2	2-3/4
B-30-WFWF	3	2-1/2	8	7	2-3/4

PROJECT:

TITLE:  
WIDE FLANGE

DATE:

DRAWN:  
Robert Gibbs

SCALE:  
NTS

DWG.#:  
2-5-2A