




# AIR FACTORS

6226-A INDUSTRIAL WAY  
LIVERMORE, CA 94551

PH. # 925-579-0040  
FAX # 925-579-0044

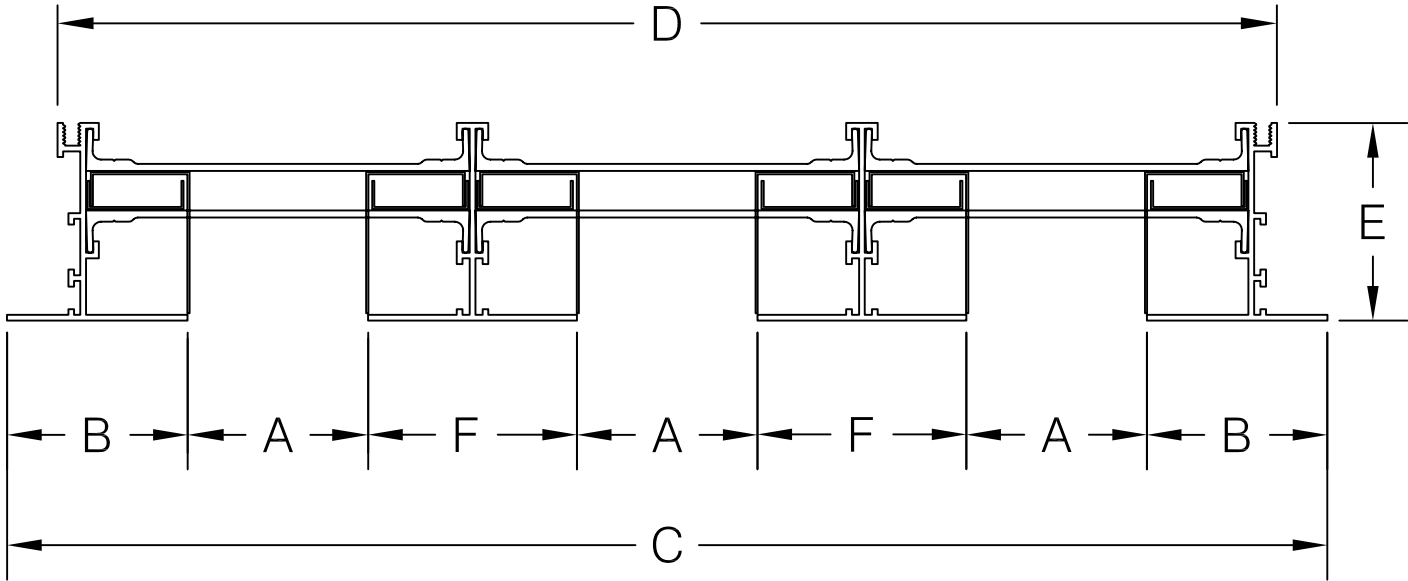

MODEL	A	B	C	D	E	F
B-10(3)-WFWF	1	1-1/2	8-5/8	7-1/2	1-11/16	1-5/16
B-15(3)-WFWF	1-1/2	2	12-1/8	10-1/2	1-15/16	1-13/16
B-20(3)-WFWF	2	2	14-5/8	13-1/2	2-3/16	2-5/16
B-25(3)-WFWF	2-1/2	2-1/2	19-5/16	18-5/16	2-3/4	3-13/32
B-30(3)-WFWF	3	2-1/2	20-13/16	19-13/16	2-3/4	3-13/32

PROJECT:

TITLE: JET PAIR WIDE FLANGE

DATE:

DRAWN BY:  
Bob Gibbs

SCALE:  
NTS

DWG.#:  
3-T-2