




AIR FACTORS

6226-A INDUSTRIAL WAY
LIVERMORE, CA 94551

PH. # 925-579-0040
FAX # 925-579-0044

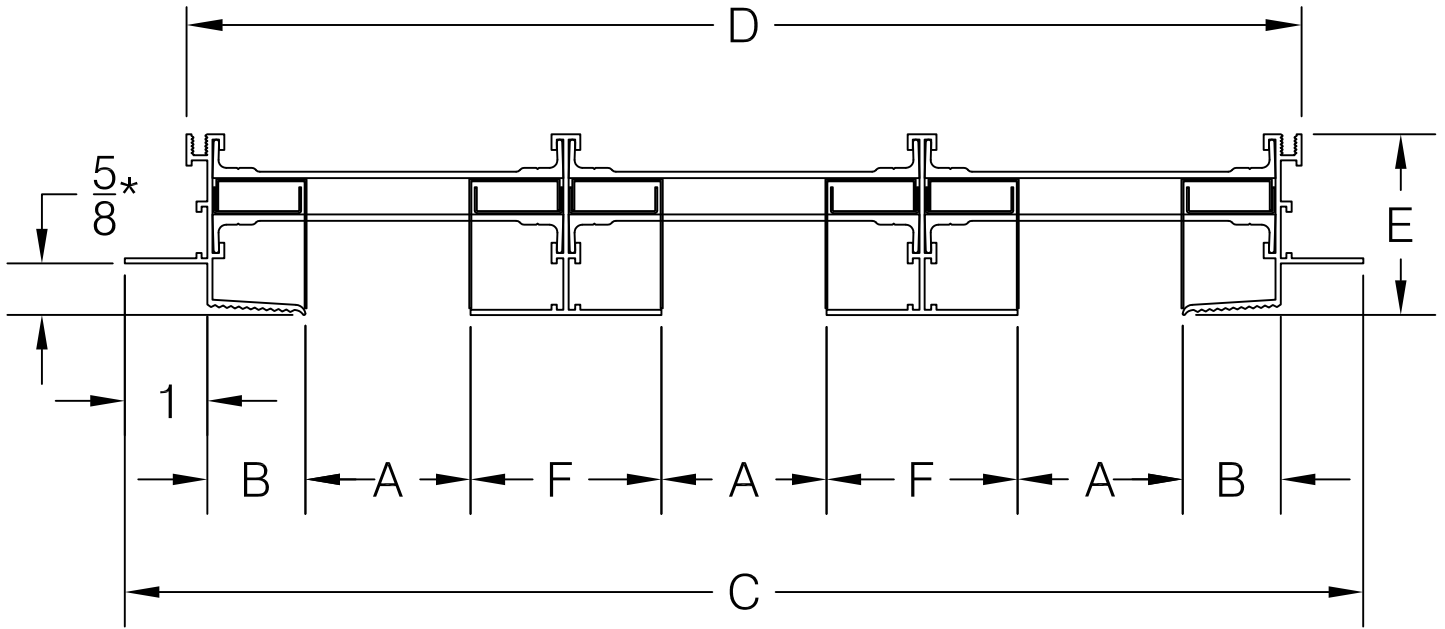

MODEL	A	B	C	D	E	F
B-10(3)-HFHF	1	1-3/16	9	7-1/2	1-11/16	1-5/16
B-15(3)-HFHF	1-1/2	1-7/16	12	10-1/2	1-15/16	1-13/16
B-20(3)-HFHF	2	1-11/16	15	13-1/2	2-3/16	2-5/16
B-25(3)-HFHF	2-1/2	2-1/4	19-13/16	18-5/16	2-3/4	3-13/32
B-30(3)-HFHF	3	2-1/4	21-5/16	19-13/16	2-3/4	3-13/32

*Recommended for 1/2" Drywall

PROJECT:

TITLE:

JET PAIR HIDDEN FLANGE

DATE:

DRAWN:

Robert Gibbs

SCALE:

NTS

DWG. #:

3-T-3A