


# AIR FACTORS

6226-A INDUSTRIAL WAY  
LIVERMORE, CA 94551

PH. # 925-579-0040  
FAX # 925-579-0044

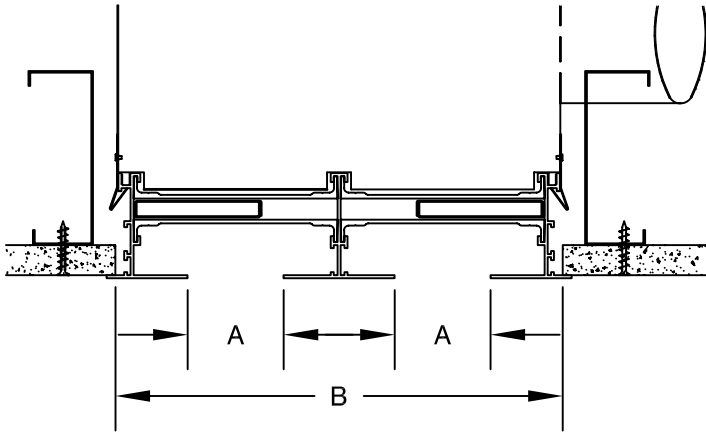


AIR BAR	A Slot Width	B Drywall Opening
B-10(2)-EE	1	5-5/16
B-15(2)-EE	1-1/2	7-5/16
B-20(2)-EE	2	9-5/16
B-25(2)-EE	2-1/2	12-5/8
B-30(2)-EE	3	13-5/8

Drywall Opening = Slot Length +  $\frac{1}{2}$



DRYWALL OPENING FOR EXPOSED FLANGE AIR BAR WITH FLANGED END CAPS

Drywall Opening = Overall Length - D

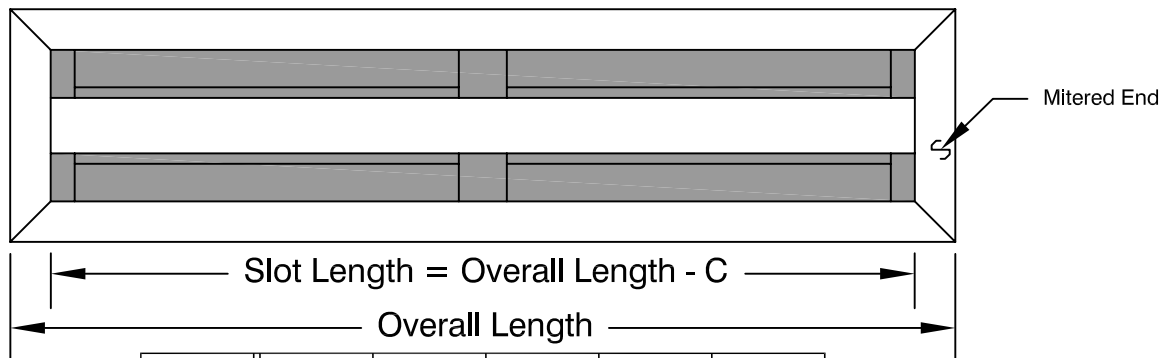

AIR BAR	B10(2)EE	B15(2)EE	B20(2)EE	B25(2)EE	B30(2)EE
C	2-3/8	2-7/8	3-3/8	4-1/2	4-1/2
D	7/16	7/16	7/16	7/16	7/16

DRYWALL OPENING FOR EXPOSED FLANGE AIR BAR WITH MITERED ENDS