


# AIR FACTORS

6226-A INDUSTRIAL WAY  
LIVERMORE, CA 94551

PH. # 925-579-0040  
FAX # 925-579-0044

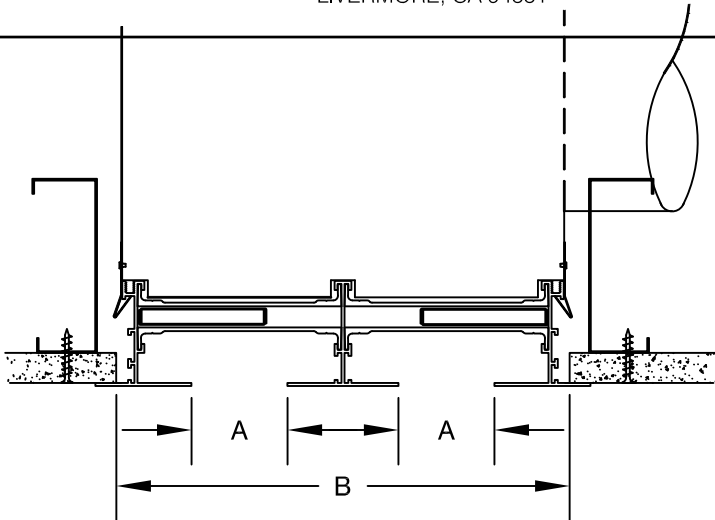


AIR BAR	A Slot Width	B Drywall Opening
B-10(2)-WFWF	1	5-5/16
B-15(2)-WFWF	1-1/2	7-5/16
B-20(2)-WFWF	2	9-5/16
B-25(2)-WFWF	2-1/2	12-5/8
B-30(2)-WFWF	3	13-5/8

Drywall Opening = Slot Length +  $\frac{1}{2}$



DRYWALL OPENING FOR WIDE FLANGE  
AIR BAR WITH FLANGED END CAPS

Drywall Opening = Overall Length - D

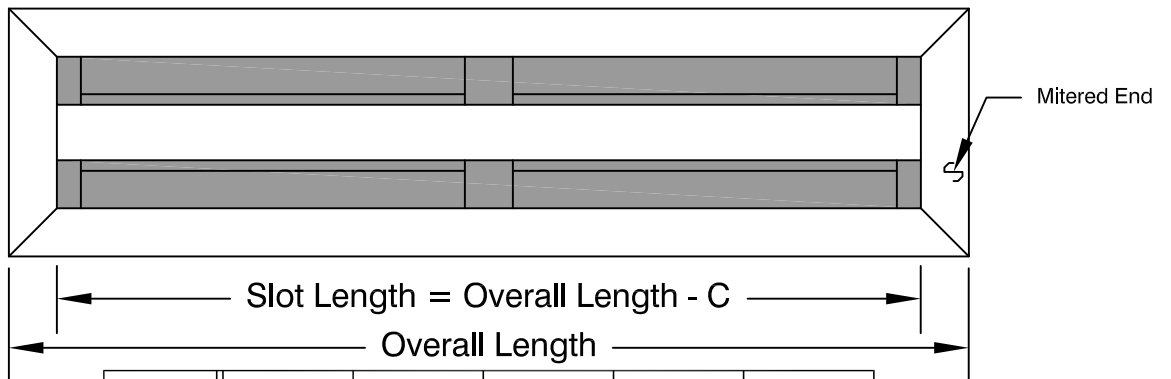

AIR BAR	B10(2)WFWF	B15(2)WFWF	B20(2)WFWF	B25(2)WFWF	B30(2)WFWF
C	3	4	4	5	5
D	1	1-1/2	1	7/8	7/8

DRYWALL OPENING FOR WIDE FLANGE  
AIR BAR WITH MITERED ENDS

9-D-2A