




# AIR FACTORS

6226-A INDUSTRIAL WAY  
LIVERMORE, CA 94551

PH. # 925-579-0040  
FAX # 925-579-0044

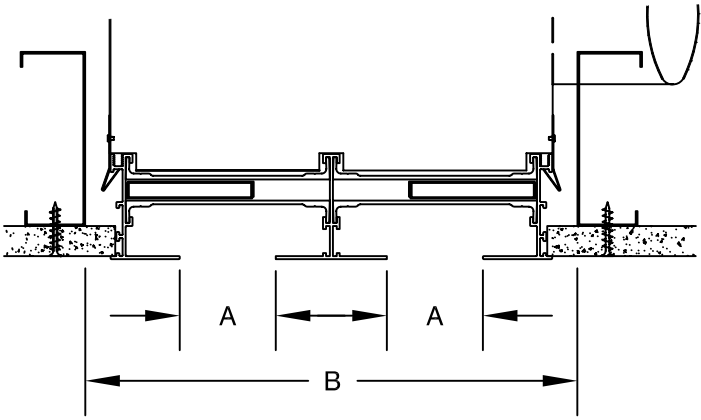


AIR BAR	A Slot Width	B Framing Opening
B-10(2)-FF	1	6-1/4
B-15(2)-FF	1-1/2	8-1/4
B-20(2)-FF	2	10-1/4
B-25(2)-FF	2-1/2	13-7/16
B-30(2)-FF	3	14-7/16

Drywall Opening = Slot Length +  $\frac{1}{2}$



DRYWALL OPENING FOR FLUSH FLANGE AIR BAR WITH FLANGED END CAPS

Drywall Opening = Overall Length - D

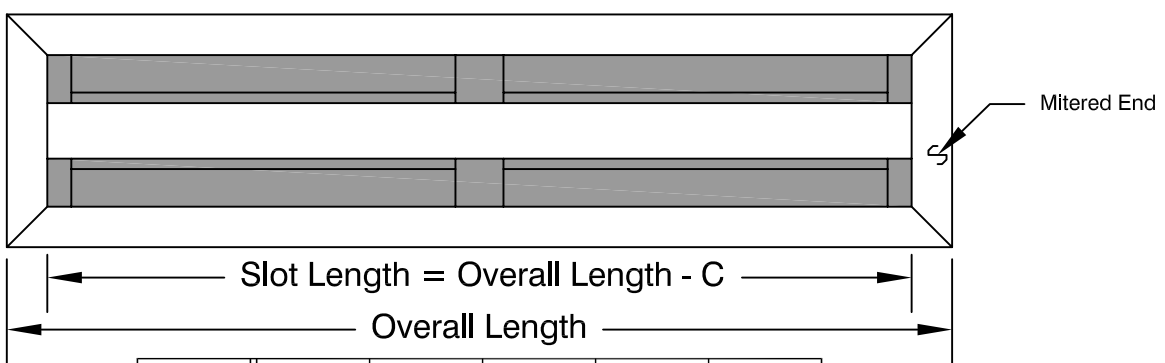

AIR BAR	B10(2)-FF	B15(2)-FF	B20(2)-FF	B25(2)-FF	B30(2)-FF
C	2-3/8	2-7/8	3-3/8	4-1/2	4-1/2
D	7/16	7/16	7/16	7/16	7/16

DRYWALL OPENING FOR FLUSH FLANGE AIR BAR WITH MITERED ENDS

9-D-4A