




# AIR FACTORS


6226-A INDUSTRIAL WAY  
LIVERMORE, CA 94551

PH. # 925-579-0040  
FAX # 925-579-0044

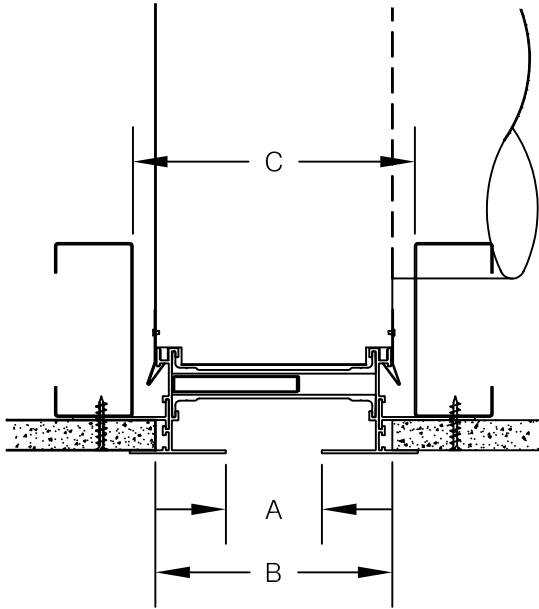


AIR BAR	A Slot Width	B Drywall Opening	C Framing Opening
B-10-WFWF	1	3	3-7/8
B-15-WFWF	1-1/2	4	4-7/8
B-20-WFWF	2	5	5-7/8
B-25-WFWF	2-1/2	6-5/8	7
B-30-WFWF	3	7-1/8	8

Drywall Opening = Slot Length +  $\frac{1}{2}$

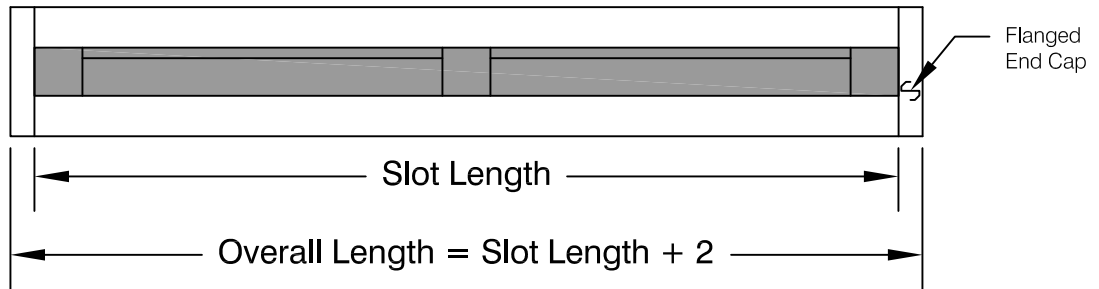

DRYWALL OPENING FOR WIDE FLANGE  
AIR BAR WITH FLANGED END CAPS

Drywall Opening = Overall Length - D

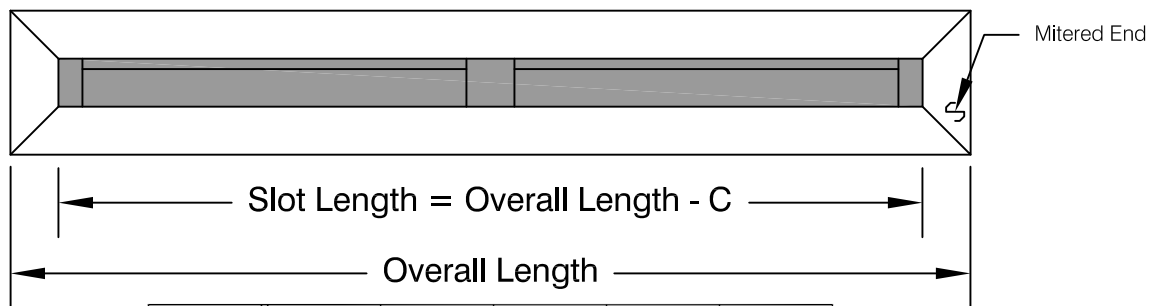

AIR BAR	B10WFWF	B15WFWF	B20WFWF	B25WFWF	B30WFWF
C	3	4	4	5	5
D	1	1-1/2	1	7/8	7/8

DRYWALL OPENING FOR WIDE FLANGE  
AIR BAR WITH MITERED ENDS

9-5-2A